

FOLDING SCOOTER



User Manual

Read this entire manual before using the product.

For assistance, please contact Radio Road at

www.radioroadtoys.com

 
DO NOT RETURN TO STORE

Ages 5+

Max. Weight: 110 lbs. (50 kg.)

We make every effort to present the most current specifications and product features when printing this manual. As a result of our continual improvement, changes may be made to equipment, specifications and features without notice.

SCOOTER PARTS

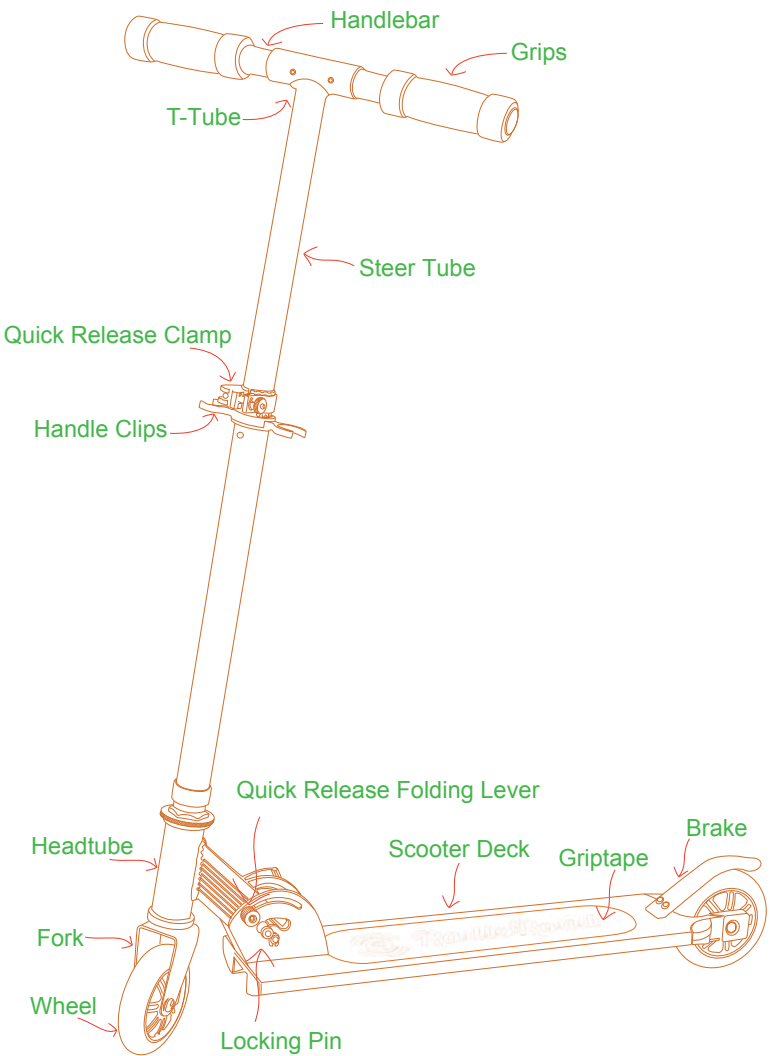

SAFETY

WARNING

Be sure to read and follow the assembly instructions before assembling and using the product.

1. This product is intended for users ages 5+.
2. Maximum rider weight is 110 lbs. (50 kg).
3. Always wear safety equipment such as a helmet, knee pads, and elbow pads.
4. Always wear a helmet when riding your scooter and keep the chinstrap securely buckled.
5. Always wear shoes.
6. Ride on smooth, paved surfaces away from motor vehicles.
7. Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
8. Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
9. Do not ride at night.
10. Brake will get hot from continuous use. Do not touch after braking.
11. Avoid excessive speed associated with downhill rides.
12. Adults must assist children in the initial adjustment procedures to unfold scooter, adjust handlebar and steering height, and finally to fold the scooter.
13. Obey all local traffic and scooter riding laws and regulations.
14. Watch out for pedestrians.
15. Check and secure all fasteners before every ride.
16. Replace worn or broken parts immediately.



REPLACEABLE PARTS

PART#	DESCRIPTION	PART#	DESCRIPTION
SC001-QRC	Quick Release Clamp	SC001-BLT	Wheel Bolt
SC001-GRN-WH	Clear Wheel	SC001-BLK-WH	Blue Wheel
SC001-GRN-GR	Blue Grip	SC001-BLK-GR	Dark Blue Grip
SC001-GRN-BK	Blue Foot Brake	SC001-BLK-BK	Grey Foot Brake

ASSEMBLY INSTRUCTIONS

Installing the Handlebars



 
 
1. Depress the spring-loaded button on the Handlebar and insert into the T-tube. Repeat for the other side.
2. The spring-loaded button on the Handlebar will come out of the hole in the T-tube when fully engaged.

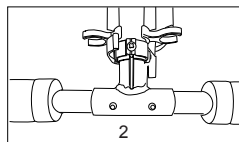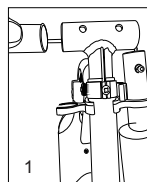

NOTE: DO NOT RIDE SCOOTER IF THE SPRING-LOADED BUTTONS ARE NOT FULLY ENGAGED WITH THE T-TUBE.

Folding and Unfolding the Scooter

    
1. Open the Quick Release Folding Lever by pulling away from scooter.
2. On the opposite side depress the Locking Pin. While pressing the Locking Pin inwards, rotate the front part of the scooter forward until the pin is in a locked position.
3. Tighten the Quick Release Folding Lever and close.
4. To fold your scooter, repeat step 1 and then step 2 in the reverse.

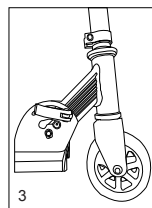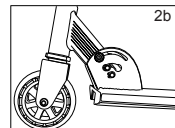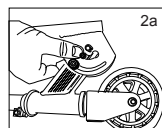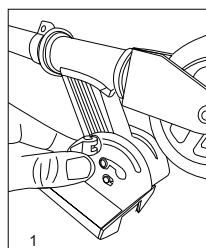


NOTE: THE SCOOTER SHOULD NEVER BE USED IF THE LOCKING PIN AND LEVER ARE NOT FULLY ENGAGED. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY.

Adjusting the Handlebar Height

 1. Open the Quick Release Clamp by pulling the lever away from the Steer Tube.

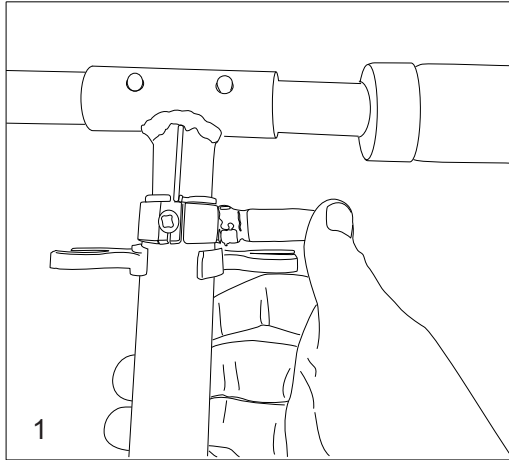

 2. Adjust the Handlebar to the proper height; an ideal height will allow the user to keep both hands on the handles with the elbows at 90 degrees.
3. Tighten the Quick Release Clamp and close.

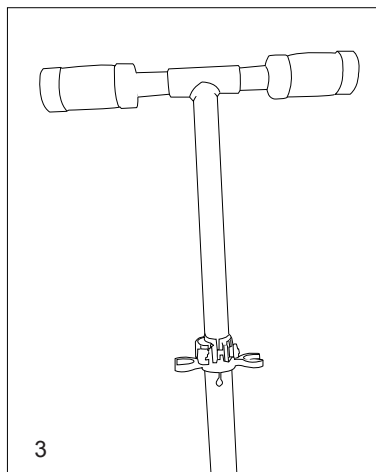

WARRANTY



DO NOT RETURN TO STORE

Failure to follow these instructions may damage your product and void your warranty.



Radio Road Limited Warranty:

Radio Road warrants that this product shall be free from defects in workmanship for one year from the day of purchase. If the product is defective, Radio Road's sole obligation under this warranty shall be at its election, subject to the terms of this warranty, to repair or replace any parts deemed defective. This warranty is for the exclusive benefit of the original purchaser and is not assignable or transferable. THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TERMS OF THIS WARRANTY, UNLESS OTHERWISE PROHIBITED BY LAW.

Exclusions

To the fullest extent permitted by law, Radio Road expressly disclaims and excludes from this warranty any liability for damages, including but not limited to general, special, indirect, incidental, consequential, aggravated, punitive or exemplary damages, and economic loss (even if Radio Road is informed of their possibility), third party claims against you, including for any loss or damages, and claims or damages related to loss of, or, damage to, your records or data. This warranty does not apply to any product the exterior of which has been damaged or defaced. This warranty will be voided by misuse, improper physical environment, improper repair, acts of God, war or terror, commercial use, and improper service, operation or handling.

Return Merchandise for Service

Any claim under this warranty must be made in writing to Radio Road, at the address provided by our technician, within 30 days after the owner discovers the circumstances giving rise to any such claim, and must include a copy of this warranty document, a receipt or copy of your invoice marked with the date of purchase and the original packaging. You may obtain service by calling the technician for a Return Merchandise Authorization (RMA) number. The RMA number must be prominently displayed on the outside of the shipping carton and the package must be mailed to Radio Road postage prepaid.

Radio Road
4720 Radio Road
Naples, Florida 34104
877 818 4221
www.radioroadtoys.com